

# CPX-1 & CPX-2 HAMMER REMOVAL AND REPLACEMENT



The following instructions describe the process for hammer removal and replacement in the models CPX-1 and CPX-2 handguns. For further disassembly instructions please refer to the owner's manual included with your firearm.

## REQUIRED TOOLS

- 1 END CAP TOOL
- 2 3/32" ROLL PIN PUNCH



Pull slide back so disassembly slot aligns with pin.



Remove disassembly pin.



Remove the upper assembly from the lower assembly.



Using the end cap tool, pry up and release the end cap from the frame.

### **⚠ DANGER**

NEVER DISASSEMBLE A LOADED FIREARM. DOING SO CAN CAUSE SERIOUS INJURY OR DEATH TO SELF AND/OR BYSTANDERS.

# CPX-1 & CPX-2 HAMMER REMOVAL AND REPLACEMENT



STEP  
**05**

Using a 3/32" punch, remove the frame pins.



STEP  
**06**

Remove the frame assembly.



STEP  
**07**

Remove the roll pin in the end cap.



STEP  
**08**

Remove the safety lever (CPX-1 only).

## **⚠ DANGER**

NEVER DISASSEMBLE A LOADED FIREARM. DOING SO CAN CAUSE SERIOUS INJURY OR DEATH TO SELF AND/OR BYSTANDERS.

# CPX-1 & CPX-2 HAMMER REMOVAL AND REPLACEMENT



STEP  
**09**

Remove the hammer axis pin.



STEP  
**10**

Remove hammer and spring assembly.

## HAMMER REPLACEMENT AND REASSEMBLY

To replace the CPX-1 or CPX-2 hammer and reassemble your firearm. Simply follow the previous steps in reverse order beginning with Step 10 and working towards Step 01.

### **DANGER**

NEVER DISASSEMBLE A LOADED FIREARM. DOING SO CAN CAUSE SERIOUS INJURY OR DEATH TO SELF AND/OR BYSTANDERS.